

- 1/ SET ENGINE TO T.D.C
- 2/ INSERT & ZERO DIAL INDICATOR
- 3/ TURN ENGINE BACK AND LINE UP TIMING MARK
- 4/ CHECK TIMING ON DIAL INDICATOR
- 5/ ADJUST TIMING BY MOVING COIL UP OR DOWN

